



Installation Recommendations

1. The HDL DV7 is designed to fit underneath the roofing underlay and directly on top of the sarking boarding in a typical Scottish roof detail where the slates are fixed directly to the boards.
2. Commence fitting the verge from ridge to eaves. The horizontal flange of the verge should be positioned on to the sarking boards and fixed using the suitable nails of an acceptable quality at 500mm centres maximum. The roofing underlay should be trimmed into the channel of the verge profile.
3. When joining sections of the Dry Verge, it is essential to interlock the upper section into that of the next lower section allowing approximately 150mm overlap for in-line joints.


Typical Installation Detail

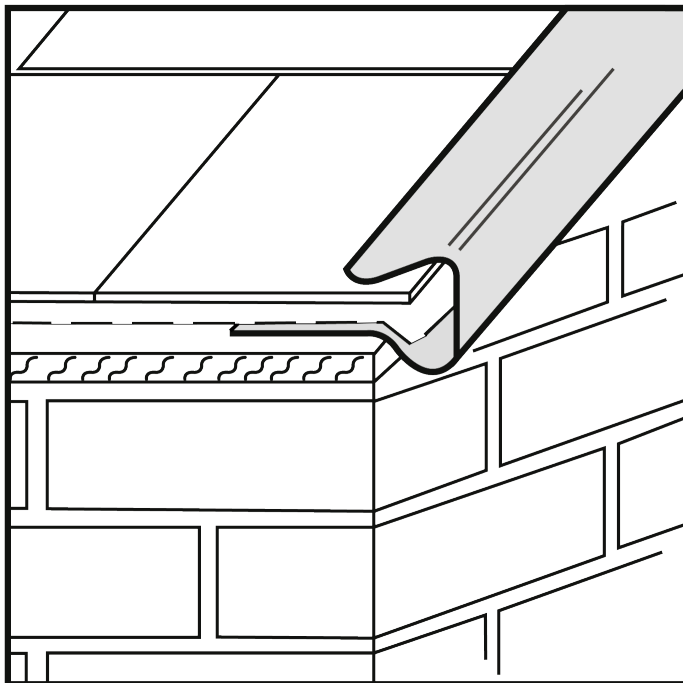

Ridge Joints: The verges are cut with a vertical mitre and butt jointed. A lead or lead replacement saddle may be fitted under or over the joint if required. The ridge tile should be trimmed if necessary to suit, or a block end ridge tile used.

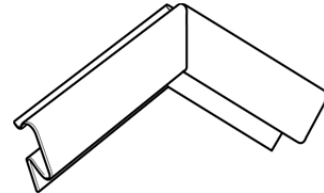

Verge Joints: Where the joints in the verge are required along the edge of the roof, they should be overlapped with the lower section fitted over/around the upper section.

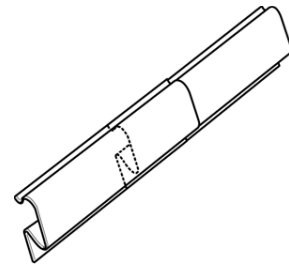

Sprocket Joints: Slight or gentle sprockets can easily be accommodated by cutting the lower section to a slight rake and fitting over the main verge section.

